


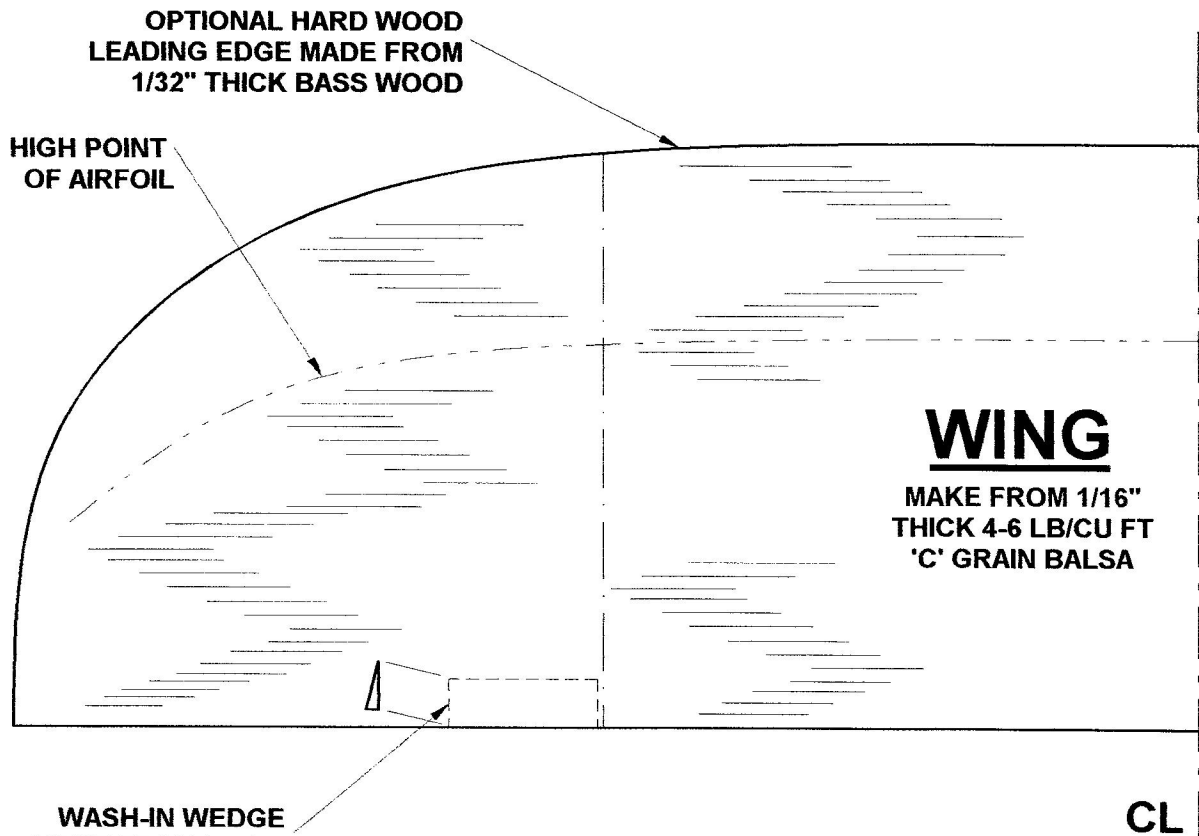

WASH-IN WEDGE
MAKE FROM LIGHT
1/16" Balsa to
CROSS SECTION


STABILIZER

MAKE FROM 1/32"
THICK 4-6 LB/CU FT
'C' GRAIN Balsa

FUSELAGE


MAKE FROM 1/8"
THICK 8-10 LB/CU FT
'A' OR 'B' GRAIN Balsa

ADD CLAY TO NOSE
UNTIL IT BALANCES
CLOSE TO NOTED CG.


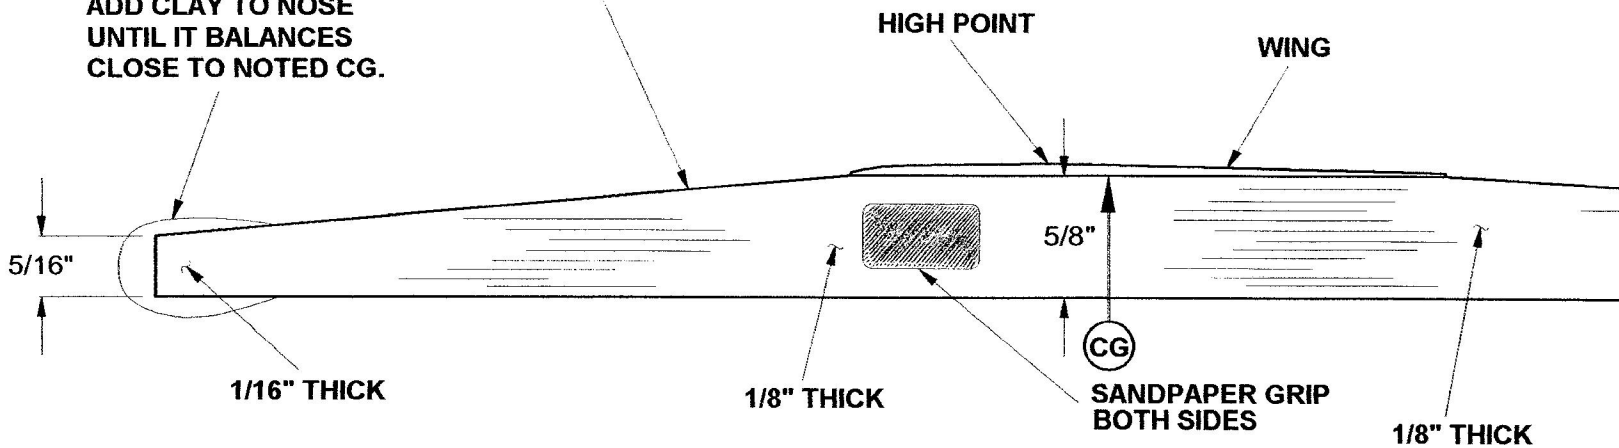


BEAMS IND

DRAWN BY DAVID F

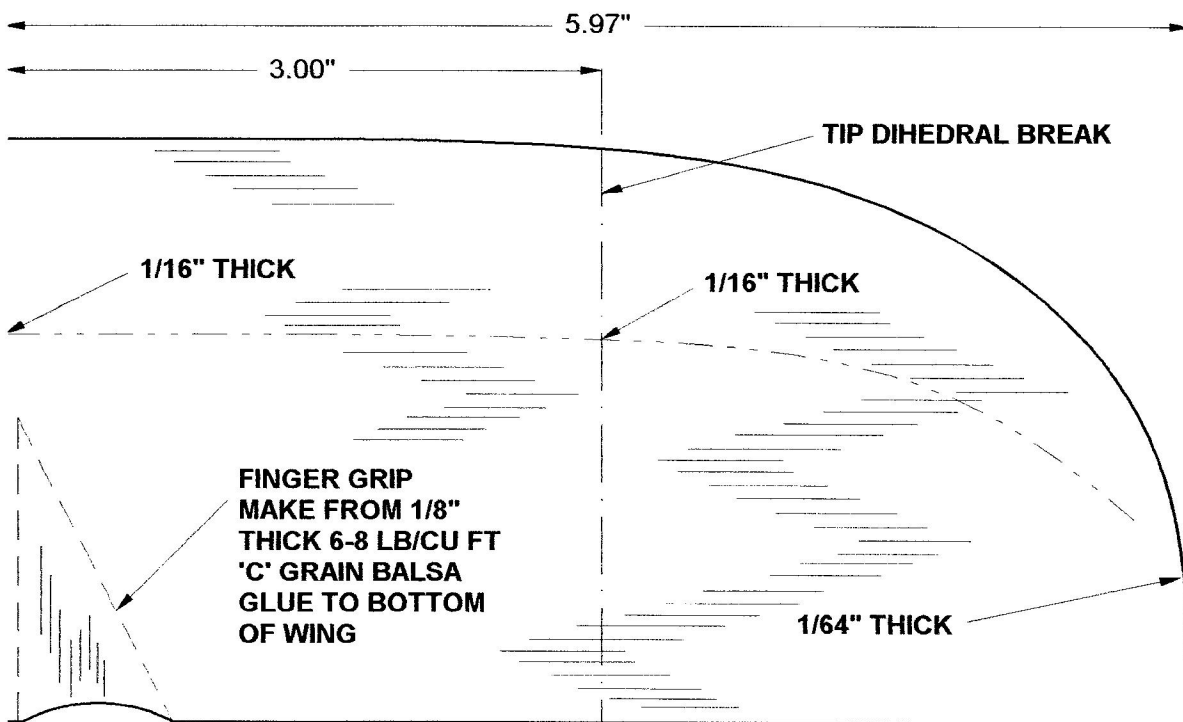


SYMM

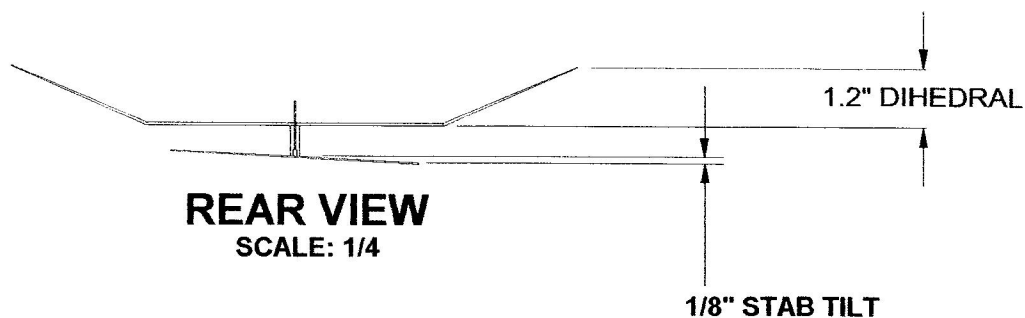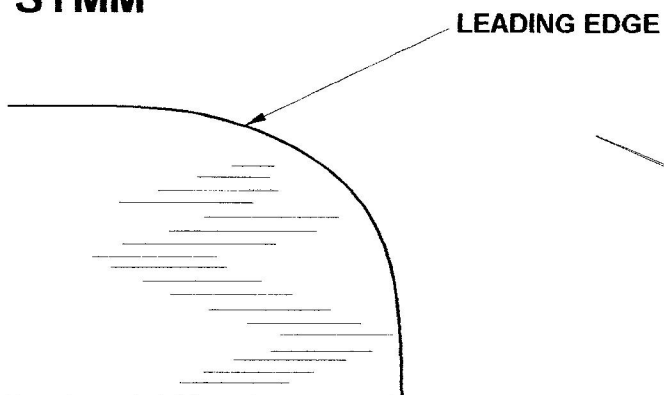

RUDDER

MAKE FROM 1/32"
THICK 4-6 LB/CU FT
'C' GRAIN BALSA

NOTE: STRAIGHT TAPER
TO AFT END OF FUSELAGE

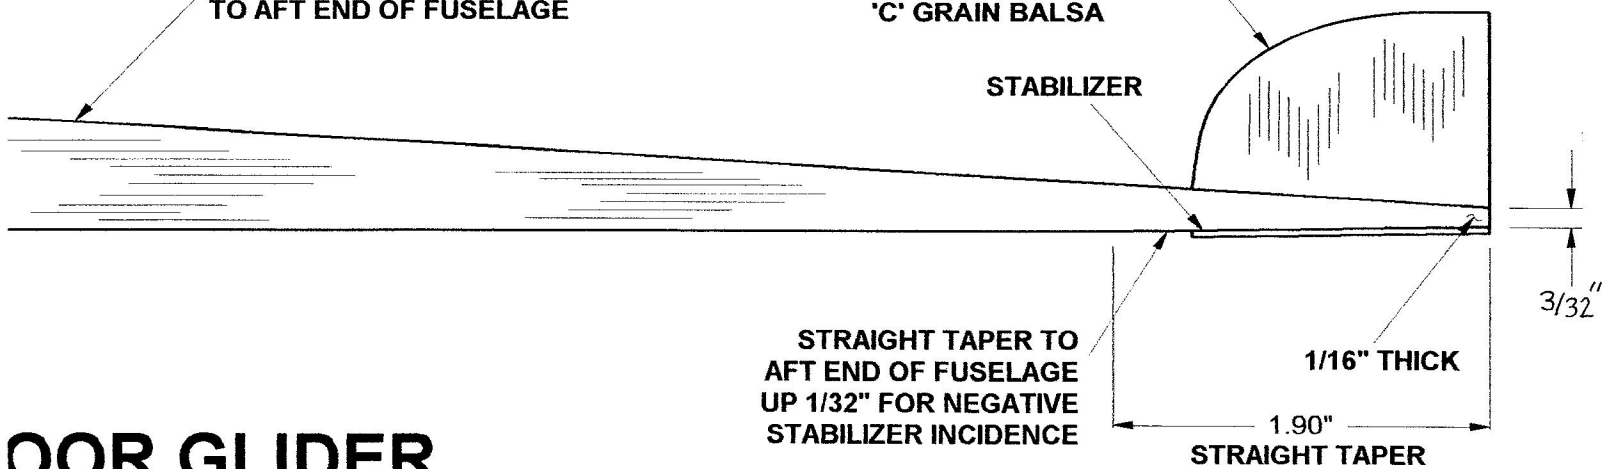

DOOR GLIDER

R. HIGGINS, 04-17-14